


Summary for general board use

SCExAO2

- 1) Ensure SRC - power on
- 2) Crank up power by removing filters:
 - i) SRC-flux irnd 1 (max 6 which is heavy filter)
 - ii) SRC-flux filter 1 "
- 3) Press a on palila cam lots to ↓ exposure
- 4) dm-flat
- 5) nuller-pickoff in

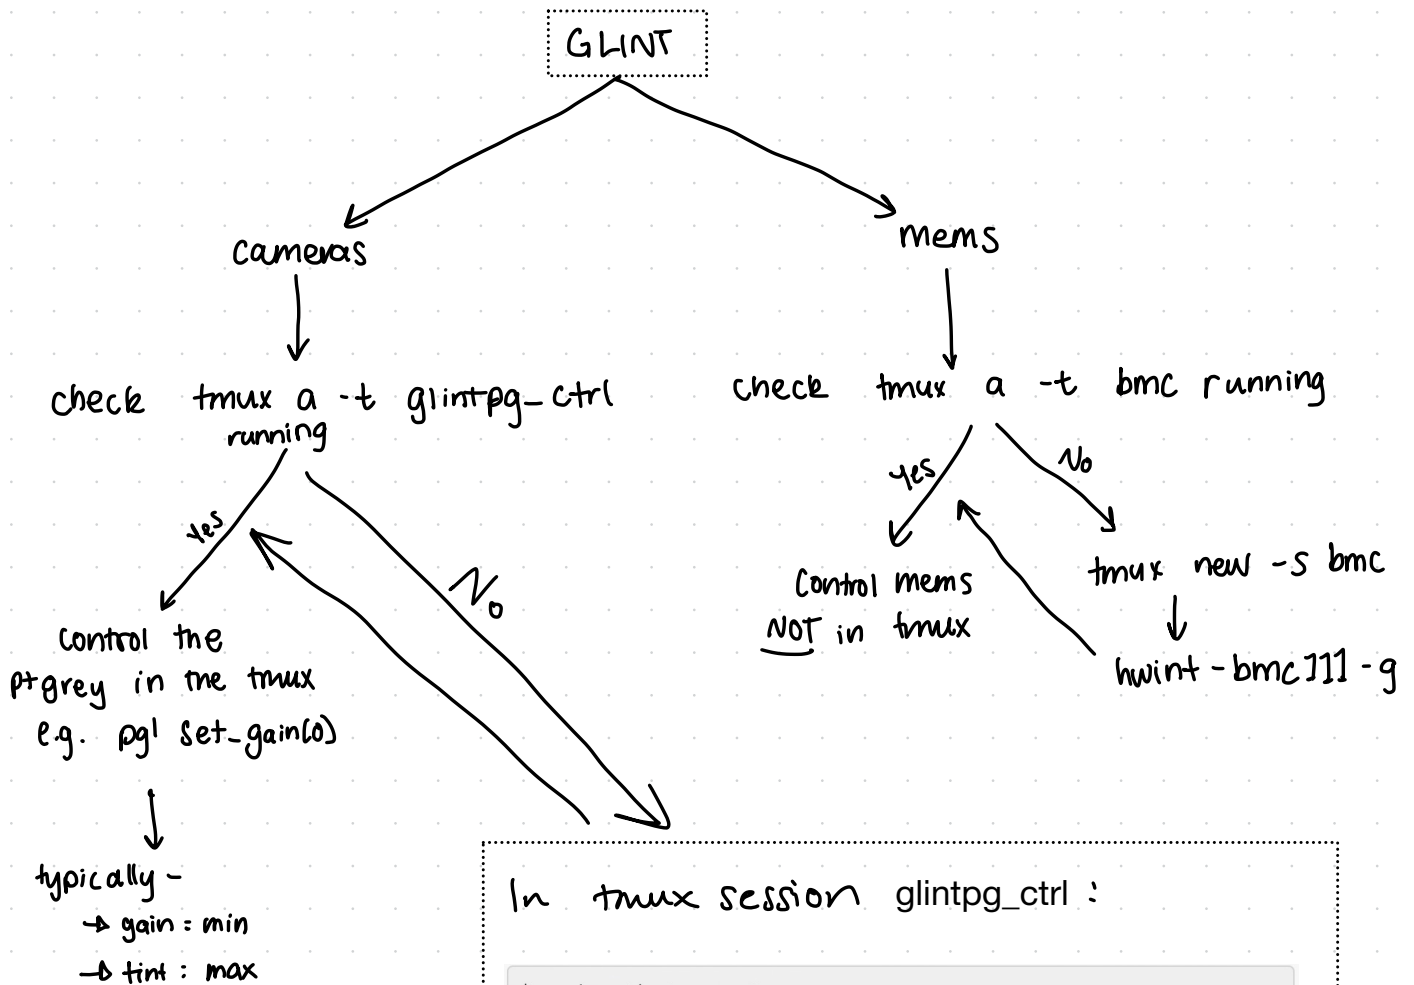

In tmux session glintpg_ctrl :

```
$ conda activate pycapture
$ ipython
>>> from camstack.cams.flycapturecam import Chameleon3
>>> pg1 = Chameleon3('glintpg1', 'glintpg1', 'FULL', 15322651)
>>> pg2 = Chameleon3('glintpg2', 'glintpg2', 'FULL', 15322653)
```

Then in another terminal

```
shmImshow.py glintpg1 &
shmImshow.py glintpg2 &
```